

LG  
TV  
6710V00142D

Mandis Shop S.L.  
Av. Cerdanyola N° 75 1º Of. 115 - Sant Cugat del Vallès (Barcelona)  
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	
MUTE	Mute		EXIT	Exit	
1	1		BACK	Q.View	
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	List	[Ei]/Index
5	5		FAV(LIST)	MC/Eject	FAV
6	6		CH+	PR+	
7	7		CH-	PR-	
8	8		TEXT	Text	
9	9		<P>	[E?]/Reveal	SSM
0	0		...	[EX]/Position	[E+]/Hold
VOL	XStudio	Sleep	TV/RADIO	D/A TV	[EX]/Mode
MENU	Menu		OPT+	[Eo]/Time	PSM
>PLAY	Play		SOURCE	Input	ARC
PAUSE	Pause		V-FORMAT	[E♦]/Size	
] STOP	Stop		WIDF	[.:E]/Mix	PIP
RECORD	Rec				
<<	<</Info				
>>	>>/Mark				
<<	<<				
>>	>>				
RED	Red/PIP PR-				
GREEN	Green/PIP PR+				
YELLOW	Yellow/Swap				
BLUE	Blue/PIP Input				
MEDIA	Multimedia				
PRG(SLIDE)	Guide	I-II			
OK	OK				
▲	Up				
◀	Left				
▶	Right				