


 

 


 



 




 

 





| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  CH.List |  Smart / List |
|  0 |  0 |
|  Recall |  Back / Return |
|  Vol+ |  Vol+ |
|  PIC.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |

| Original | Replacement |
|---|--|
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Source |  AV / Input / RDS |
|  CH- |  CH- / Page- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Rec |  Rec / Rec Mode |
|  Timeshift |  Shift + Pause / Step / |
|  Timer |  Shift + Sleep / Timer |
|  Rec.List |  Shift + Smart / List |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |





| Original | Replacement |
|----------|-----------------------------|
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | Shift + Picture / Format |
| | TV/Radio / |
| | Sleep / Timer |
| | Subtitle / EQ |
| | Info / Angle |
| | D.Menu / Top |
| | Audio / Lang I/II |
| | Display / Media |
| | Text / Goto |
| | Zoom / Size |
| | Play / Slow |
| | Pause / Step / Freeze |
| | Setup / OPT / |
| | Stop / Hold |
| | Shift + Stop / Hold |

| Original | Replacement |
|----------|---------------|
| | I<< / Preset- |
| | >>I / Preset+ |
| | << / Tune- |
| | >> / Tune+ |

