

















































 
 



 



 



 








Original		Replacement		Original		Replacement	
	Power		Power		Smart Hub		VOD
	Source		SRC		Vol+		VOL +
	HDMI		MEDIA		Vol-		VOL -
	1		1..?		P+		CH +
	2		2ABC		P-		CH -
	3		3DEF		Guide		-/-- / EPG
	4		4GHI		Menu		MENU
	5		5JKL		Tools		OPT+
	6		6MNO		Info		INFO
	7		7PQRS		Up		UP
	8		8TUV		Enter		OK
	9		9WXYZ		Down		DOWN
	0		0		Right		RIGHT
	TTX/MIX		TEXT		Left		LEFT
	PRE-CH		FAV 2.P/C		Return		BACK
	Mute		MUTE		Exit		EXIT
	CH List		TV/R		Red		Red (A)





Original		Replacement		Original		Replacement	
	Green		Green (B)				
	Yellow		Yellow (C)				
	Blue		Blue (D)				
	Search		Audio				
	P.Size		V-FOR				
	Status		WIDE				
	AD/Subt.		Subt.				
	E-Manual		Shift + EPG -/- / EPG				
	History		Shift + P/C / FAV				
	<</l<<		Rewind				
	Pause		Pause				
	>>/l>>		Fast Forward				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

