

 

 


 
 

 
 

 
 
 





| Original  | Replacement | Original  | Replacement                 |
|---|-------------|---|-----------------------------|
|      | Power       |      | Power                       |
|      | 1           |      | 1                           |
|      | 2           |      | 2                           |
|      | 3           |      | 3                           |
|      | 4           |      | 4                           |
|      | 5           |      | 5                           |
|      | 6           |      | 6                           |
|      | 7           |      | 7                           |
|      | 8           |      | 8                           |
|      | 9           |      | 9                           |
|     | FAV         |     | Fav / Marker / PC           |
|    | 0           |    | 0                           |
|    | TXT         |    | Text / Goto                 |
|    | Red         |    | Red / Netflix / Search      |
|    | Green       |    | Green / APP / Repeat        |
|    | Yellow      |    | Yellow / YouTube / Repeat   |
|    | Blue        |    | Blue / Prime Video / Random |
|    | CEC         |    | Smart / List                |
|    | ?           |    | D.Menu / Top                |
|    | Exit        |    | Exit / Cancel / Clear       |
|    | Menu        |    | Menu / Home                 |
|    | Up          |    | Up                          |
|    | Back        |    | Back / Return               |
|    | Left        |    | Left                        |
|    | OK          |    | OK                          |
|    | Right       |    | Right                       |
|    | Down        |    | Down                        |
|   | Guide       |   | Guide / EPG / -/-           |
|  | Tools       |  | Setup / OPT /               |
|  | Vol+        |  | Vol+                        |
|  | Source      |  | AV / Input / RDS            |
|  | PR+         |  | CH+ / Page+                 |
|  | Vol-        |  | Vol-                        |
|  | Mute        |  | Mute / Dimmer               |





|  | Original   | Replacement   | Original | Replacement |
|--|--|---|----------|-------------|
|  |  PR-        |  CH- / Page-           |          |             |
|  |  I<         |  I<< / Preset-         |          |             |
|  |  >I         |  >>I / Preset+         |          |             |
|  |  <<         |  << / Tune-            |          |             |
|  |  >>         |  >> / Tune+            |          |             |
|  |  Rec        |  Rec / Rec Mode        |          |             |
|  |  Play       |  Play / Slow           |          |             |
|  |  Pause      |  Pause / Step / Freeze |          |             |
|  |  Stop       |  Stop / Hold           |          |             |
|  |  [<>]      |  Picture / Format     |          |             |
|  |  Dialog   |  Audio / Lang I/II   |          |             |
|  |  [...]    |  Subtitle / EQ       |          |             |
|  |  Tv/Radio |  TV/Radio /          |          |             |
|  |  My Media |  Display / Media     |          |             |
|  |  |   |          |             |
|  |  |   |          |             |
|  |  |   |          |             |
|  |  |   |          |             |

