






























Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 D.Menu / Top
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Rec / Rec Mode
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat

Original	Replacement	Original	Replacement
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	
 CLEAR	 EXIT	 BACK	
 EXIT	 LIST	 SMART	 CH PAGE
 CANCEL	 MEDIA	 DISPLAY	
 VOL+	 TV	 DVD	 CD - STB
 VOL-	 VIDEO	 TAPE	 TUNER
 1	 AUX - HDD	 USB	 BLUETOOTH
 2	 7	 8	 PC
3	GUIDE EPG	HDMI - BAT	FAV MARKER
4	NETFLIX	APP	Prime Video
5	SEARCH	REPEAT	REPEAT A-B
6	REPEAT	REPEAT A-B	RANDOM
7	Mandis SHOP	www.mandis.tv	





Original	Replacement	Original	Replacement
	Yellow / YouTube / Repeat		I<< / Preset-
	Blue / Prime Video / Random		>>I / Preset+
	Shift + Picture / Format		<< / Tune-
	TV/Radio /		>> / Tune+
	Sleep / Timer		
	Subtitle / EQ		
	Info / Angle		
	Setup / OPT /		
	Audio / Lang I/II		
	Display / Media		
	Text / Goto		
	Zoom / Size		
	Play / Slow		
	Eject / Surround		
	Pause / Step / Freeze		
	Shift + Stop /		
	Stop / Hold		

