



 
 
 


 

 
 




 


 







| Original | Replacement |
|---|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TTX/MIX |  Text / Goto |
|  0 |  0 |
|  PRE-CH |  Fav / Marker / PC |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  CH+ |  CH+ / Page+ |

| Original | Replacement |
|--|--|
|  Vol- |  Vol- |
|  CH List |  Smart / List |
|  CH- |  CH- / Page- |
|  Sports |  TV/Radio / |
|  Home |  Menu / Home |
|  Guide |  Guide / EPG / -/-- |
|  Extra |  Picture / Format |
|  Up |  Up |
|  Info |  Info / Angle |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Return |  Back / Return |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |





| | Original | Replacement | Original | Replacement |
|--|----------|-----------------------------|----------|-------------|
| | | Yellow / YouTube / Repeat | | |
| | | Blue / Prime Video / Random | | |
| | | Setup / OPT / | | |
| | | Subtitle / EQ | | |
| | | Rec / Rec Mode | | |
| | | Stop / Hold | | |
| | | << / Tune- | | |
| | | Play / Slow | | |
| | | Pause / Step / Freeze | | |
| | | >> / Tune+ | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

