






 

 

 

 
 


 

 

 

 

 

 

 
 
 







Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Sports	 TV/Radio /
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Extra	 Picture / Format
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	Blue Blue / Prime Video / Random		Blue / Prime Video / Random
	Settings Setup / OPT /		Setup / OPT /
	AD/Subt. Subtitle / EQ		Subtitle / EQ
	Rec Rec / Rec Mode		Rec / Rec Mode
	Stop Stop / Hold		Stop / Hold
	<</ << << / Tune-		<< / Tune-
	Play Play / Slow		Play / Slow
	Pause Pause / Step / Freeze		Pause / Step / Freeze
	>>/>>  >> / Tune+		>> / Tune+

Original	Replacement

