





Original	Replacement
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Subtitle / EQ
	Zoom / Size
	D.Menu / Top
	Setup / OPT /
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up

Original	Replacement
	Info / Angle
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4





Original	Replacement	Original	Replacement
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
A	Red/A	NETFLIX SEARCH	Red / Netflix / Search
B	Green/B	APP REPEAT	Green / APP / Repeat
C	Yellow/C	YouTube REPEAT A-B	Yellow / YouTube / Repeat
D	Blue/D	Prime Video RANDOM	Blue / Prime Video / Random
RETURN	Return	SHIFT + RETURN BACK	Shift + Back / Return

Original	Replacement	Original	Replacement

