



Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol+
TV/RAD	TV/Radio /	Mute	Mute / Dimmer
Input	AV / Input / RDS	PR+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Energy Saving	Eject / Surround	PR-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green/Stop	Green / APP / Repeat
List	Smart / List	Green/Stop	Stop / Hold
0	0	Yellow/Play	Yellow / YouTube / Repeat
Q.View	Display / Media	Yellow/Play	Play / Slow

Original	Replacement	Original	Replacement
TV	TV	DVD	DVD
SLOW	SLOW	SAT	SAT
STEP-FREEZE	STEP-FREEZE	AUX	AUX
HOLD	HOLD	REC MODE	REC MODE
PRESET-	PRESET-	TUNE-	TUNE-
PRESET+	PRESET+	TUNE+	TUNE+
TITLE	TITLE	PRESET-	PRESET-
LANG UI	LANG UI	PRESET+	PRESET+
EQ	EQ	SURROUND	SURROUND
SOUND	SOUND	SOUND	SOUND
AUDIO	AUDIO	SUBTITLE	SUBTITLE
SUBTITLE	SUBTITLE	PROGRAM	PROGRAM
FORMAT	FORMAT	PICTURE	PICTURE
SIZE	SIZE	ZOOM	ZOOM
TIMER	TIMER	SLEEP	SLEEP
PROGRAM	PROGRAM	TV RADIO	TV RADIO
TOP MENU	TOP MENU	RDS	RDS
D.MENU	D.MENU	AV INPUT	AV INPUT
SETUP	SETUP	SETUP	SETUP
TEXT	TEXT	TEXT	TEXT
HOME	HOME	HOME	HOME
ANGLE	ANGLE	ANGLE	ANGLE
MENU	MENU	MENU	MENU
INFO	INFO	INFO	INFO
CLEAR	CLEAR	CLEAR	CLEAR
EXIT	EXIT	EXIT	EXIT
CANCEL	CANCEL	CANCEL	CANCEL
LIST	LIST	LIST	LIST
SMART	SMART	SMART	SMART
MEDIA	MEDIA	MEDIA	MEDIA
DISPLAY	DISPLAY	DISPLAY	DISPLAY
TV	TV	TV	TV
DVD	DVD	DVD	DVD
CD - STB	CD - STB	CD - STB	CD - STB
1	1	1	1
VIDEO	VIDEO	VIDEO	VIDEO
TAPE	TAPE	TAPE	TAPE
TUNER	TUNER	TUNER	TUNER
AUX - HDD	AUX - HDD	AUX - HDD	AUX - HDD
USB	USB	USB	USB
8	8	8	8
BLUETOOTH	BLUETOOTH	BLUETOOTH	BLUETOOTH
9	9	9	9
LIST	LIST	LIST	LIST
SMART	SMART	SMART	SMART
HDMI - BAT	HDMI - BAT	HDMI - BAT	HDMI - BAT
0	0	0	0
MEDIA	MEDIA	MEDIA	MEDIA
DISPLAY	DISPLAY	DISPLAY	DISPLAY
NETFLIX	NETFLIX	NETFLIX	NETFLIX
APP	APP	APP	APP
YouTube	YouTube	YouTube	YouTube
PRIME VIDEO	PRIME VIDEO	PRIME VIDEO	PRIME VIDEO
SEARCH	SEARCH	SEARCH	SEARCH
REPEAT	REPEAT	REPEAT	REPEAT
REPEAT A-B	REPEAT A-B	REPEAT A-B	REPEAT A-B
RANDOM	RANDOM	RANDOM	RANDOM





Original	Replacement
	Blue / Prime Video / Random
	Pause / Step / Freeze
	Text / Goto
	I<< / Preset-
	Setup / OPT /
	<< / Tune-
	>>I / Preset+
	Subtitle / EQ
	>> / Tune+
	Sleep / Timer
	D.Menu / Top
	Info / Angle
	Guide / EPG / -/--
	Fav / Marker / PC

Original	Replacement

