 











 
 
 
 

 


 



 









 

 



 



 









 







 


 





























 



 










Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Screen	 Picture / Format
 Presets	 Setup / OPT /
 ↔	 TV/Radio /
 FAV	 Shift + Fav / Marker / PC
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 SWAP	 Fav / Marker / PC
 Photo/Music/Movi	 D.Menu / Top
 World	 Smart / List
 SOURCE	 AV / Input / RDS
 MENU	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 C	 Exit / Cancel / Clear
 DISP.	 Display / Media
 SEARCH MODE	 Shift + Red / Netflix /
 RETURN	 Back / Return





Original	Replacement
 CH+	 CH+ / Page+
 Info	 Info / Angle
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Red/↑/Zoom	 Red / Netflix / Search
 Red/↑/Zoom	 Zoom / Size
 Green/↓/Repeat	 Green / APP / Repeat

Original	Replacement
 Yellow/Root	 Yellow / YouTube / Repeat
 Blue/Title	 Blue / Prime Video / Random

