



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





	Original	Replacement
	CH+	CH+ / Page+
	Info	Info / Angle
	Vol+	Vol+
	CH-	CH- / Page-
	Mute	Mute / Dimmer
	Vol-	Vol-
	Rec	Rec / Rec Mode
	Pause	Pause / Step / Freeze
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	<<	<< / Tune-
	Play	Play / Slow
	Stop	Stop / Hold
	>>	>> / Tune+
	Red/↑/Zoom	Red / Netflix / Search
	Red/↑/Zoom	Zoom / Size
	Green/↓/Repeat	Green / APP / Repeat

	Original	Replacement
	Yellow/Root	Yellow / YouTube / Repeat
	Blue/Title	Blue / Prime Video / Random

