



| Original  | Replacement | Original  | Replacement        |
|---|-------------|---|--------------------|
|    | Power       |    | Tv Guide           |
|    | Mute        |    | Guide / EPG / -/-- |
|    | DTV         |    | 0                  |
|    | DTV         |    | Recall             |
|    | Radio       |    | Vol+               |
|    | Radio       |    | P.Mode             |
|    | USB         |    | CH+                |
|    | DVD         |    | S.Mode             |
|    | 1           |    | Vol-               |
|    | 2           |    | FAV                |
|   | 3           |    | CH-                |
|  | 4           |   | Menu               |
|  | 5           |  | Up                 |
|  | 6           |  | Exit               |
|  | 7           |  | Left               |
|  | 8           |  | OK                 |
|  | 9           |  | Right              |
|   |             |  | Source             |





| Original  | Replacement     | Original  | Replacement                 |
|---|-----------------|---|-----------------------------|
|      | Down            |      | Down                        |
|      | Info            |      | Info / Angle                |
|      | Aspect          |      | Shift + Picture / Format    |
|      | Sleep           |      | Sleep / Timer               |
|      | Audio           |      | Audio / Lang I/II           |
|      | Subtitle        |      | Subtitle / EQ               |
|      | Text            |      | Text / Goto                 |
|      | Text Hold       |      | Shift + Stop /              |
|      | Zoom/Text/DVD   |      | Zoom / Size                 |
|      | Power/Display   |      | Display / Media             |
|     | Power/Display   |     | Shift + Power               |
|    | DVD Menu        |    | D.Menu / Top                |
|    | Rec             |    | Rec / Rec Mode              |
|    | I<<             |    | I<< / Preset-               |
|    | >>I             |    | >>I / Preset+               |
|    | Stop/Eject      |    | Stop / Hold                 |
|    | Stop/Eject      |    | Eject / Surround            |
|    | Rec List/DVD    |    | Setup / OPT /               |
|    | Rec List/DVD    |    | Smart / List                |
|    | << PVR/DVD      |    | << / Tune-                  |
|    | >> PVR/DVD      |    | >> / Tune+                  |
|    | Pause           |    | Pause / Step / Freeze       |
|    | Play            |    | Play / Slow                 |
|    | Red/Goto        |    | Shift + Text /              |
|    | Red/Goto        |    | Red / Netflix / Search      |
|    | Green/A-B       |    | Green / APP / Repeat        |
|    | Green/A-B       |    | Shift + Yellow / YouTube /  |
|   | Yellow/Angle/3D |   | Yellow / YouTube / Repeat   |
|  | Yellow/Angle/3D |  | Shift + Info / Angle        |
|  | Blue/Repeat     |  | Blue / Prime Video / Random |
|  | Blue/Repeat     |  | Shift + Green / APP /       |

