

 









 

 









 



 



Original	Replacement
Power	Power
Netflix	+ Shift + Red / Netflix /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Replacement
Vol-	Vol-
i	Info / Angle
PR-	CH- / Page-
Menu	Menu / Home
Up	Up
Q.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
EXit	Exit / Cancel / Clear
World	Smart / List
Camera/Music/Ph	Display / Media
Guide	Guide / EPG / -/--
*/o	Picture / Format
Games	AV / Input / RDS





Original	Replacement
 [=]/Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Lang	 Audio / Lang I/II
 [=]..	 Subtitle / EQ
 [-O-]	 Zoom / Size
 <<<	 <<< / Tune-
	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 Rec	 Rec / Rec Mode
 ▶	 Play / Slow
 ■	 Stop / Hold

Original	Replacement

