

 

 
 



 

 









 


 
 



 

 


 
 



















 
 
 
 

 
 

 









Original	Replacement	Original	Replacement
	Power		Power
	Tv/AV/DVD		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Return		Back
	-/--		Guide
	Eject		Eject
	Play		Play
	Pause		Pause
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Sys Menu		Menu
	Display		Info
	Timer		Shift + AV
	Nicam/A2		TV/R
	Picture		Format
	Sound		Shift + Dual





Original	Replacement	Original	Replacement
 Language	 Dual		
 Zoom	 Shift + Eject		
 Subtitle	 Subt		
 Search	 Shift + TV/R		
 Setup/Tv/TXT	 Text		
 Menu Cancel	 Exit		
 Angle/Reveal	 Options		
 Title	 3D		
 <</Hold	 <<		
 >>/Size	 >>		
  <</Subpage	  <<		
 >> /Index	 >>		
 Red/Program	 Red		
 Green/Slow	 Green		
 Yellow/Repeat	 Yellow		
 Blue/A-B	 Blue		

