



 



 



 



 

 

 



 

 

 

 

 







 









 
 






 



 









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		Enter		OK
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Info		Info / Angle
	8		8		Tools		Setup / OPT /
	9		9		Menu		Menu / Home
	0		0		Guide		Guide / EPG / -/-
	TTX/MIX		Text / Goto		Content		D.Menu / Top
	PRE-CH		Back / Return		Return		Shift + Back / Return
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	CH List		Smart / List		Subt.		Subtitle / EQ
	Vol+		Vol+		Media.P		Display / Media



