 

 
 
 

 
 
 
 
 
 
 


 


 



 
 
 



 
 
 

 



 

 

 
 
 

 

 

 

 
 
 

 





 

 




 




	Original	Replacement		Original	Replacement		
	Power		Power		Play/Pause		Play
	OK		Ok		I<		I<<
	Up		Up		Home		Smart
	Down		Down		1		1
	Right		Right		2		2
	>>		>>		3		3
	Left		Left		4		4
	<<		<<		5		5
	Back		Back		6		6
	Options		Options		7		7
	Disc		Menu		8		8
	Open/Close		Eject		9		9
	Mute		Mute		0		0
	Vol+		Vol +		Sound		Dual
	Vol-		Vol -		Surr		Subt
	Stop		Stop		Source/Audio		AV
	>I		>>I		Radio		TV/R





Original		Replacement		Original		Replacement	
	USB		Format				
	Sync/Audio		3D				

