



 

 



 


 
 
 

 
 


 
 

 
 

 
 





 
 
 






 
 

 
 


 


 
 

 
 
 
 
 

 

 







Original	Replacement	Original	Replacement
	Power		Power
	Rec		Rec
	D.Menu		D. Menu
	Open/Close		Eject
	i/Info		Info
	Sleep		Sleep
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	I/II/Audio		Dual
	Subtitle		Subt
	CH.List		List
	Screen		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Q.View		Options
	Mute		Mute
	Guide		Guide
	Menu		Menu
	FAV		Pre Ch
	Exit		Exit
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -





Original	Replacement	Original	Replacement
	Up		>>
	Down		>>
	OK		[≡]/Setup
	Right		[.≡]/Title
	Left		[...]/Search
	[X]/Repeat		[+]/10+
	Zoom/Index		[?]/Program
	Play		[♦]/A-B
	Pause		Timer/Angle
	Stop		I>/D.Call
	Red		
	<<		
	Green		
	>>		
	Yellow		
	I<<		
	Blue		

