



| Original | Replacement |
|--------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV |  TV/Radio / |
|  0 |  0 |
|  Recall |  Shift + Back / Return |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  PR+ |  CH+ / Page+ |

| Original | Replacement |
|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
|  Vol- |  Vol- |
|  World/Internet |  Smart / List |
|  PR- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Q.Menu |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Back |  Back / Return |
|  Exit |  Exit / Cancel / Clear |
|  i |  Info / Angle |
|  Camera/Music/Ph |  Picture / Format |
|  Guide |  Guide / EPG / -/- |
|  */o |  Shift + Guide / EPG / -/- |
|  */o.. |  Fav / Marker / PC |





| Original | Replacement | Original | Replacement |
|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|----------|-------------|
|  [≡]/Text |  Text / Goto | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
|  Lang |  Audio / Lang I/II | | |
|  [≡].. |  Shift + Text / | | |
|  [-o-] |  Setup / OPT / | | |
|  << |  << / Tune- | | |
|  Pause |  Pause / Step / Freeze | | |
|  >> |  >> / Tune+ | | |
|  Rec |  Rec / Rec Mode | | |
|  Play |  Play / Slow | | |
|  Stop |  Stop / Hold | | |
| | | | |
| | | | |
| | | | |

