 





 









 


 

 

 



 


 


 




Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Audio/Nicam	 Dual
 Display	 Shift + Info
 Exit	 Exit
 Auto	 Smart

Original	Replacement
 Tv Menu	 Menu
 -/--	 Shift + Guide
 Guide	 Guide
 Source	 AV
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 CH-	 Ch -
 CH+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Text	 Text
 <<	 <<
 >>	 >>
 Hold	 Options





Original		Replacement		Original		Replacement	
	Index		Info		Yellow		Yellow
	I<<		I<<		Blue		Blue
	Size		Format		P.Mode	+	Shift + Format
	>>I		>>I		S.Mode	+	Shift + Dual
	Play/Pause		Play				
	Stop/Subpage		Stop				
	Zoom/Reveal		3D				
	Sleep		Sleep				
	Rec		Rec				
	Media		Media				
	Repeat/FAV-	+	Shift + Text				
	FAV	+	Shift + Pre Ch				
	FAV+	+	Shift + AV				
	Subtitle		Subt				
	Tv/Radio		TV/R				
	Red		Red				
	Green		Green				

