



Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Input-	 CH- / Page-
 Sound Mode	 Sound / Title	 Mute	 Mute / Dimmer
 Power	 Power	 Vol-	 Vol-
 AMS	 Info / Angle	 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat	 Q.Replay	 Picture / Format
 Random	 Blue / Prime Video / Random	 Pause	 Pause / Step / Freeze
 Program	 TV/Radio /	 I<<	 I<< / Preset-
 Cancel	 Exit / Cancel / Clear	 Play	 Play / Slow
 Scroll/Recall	 Back / Return	 >>I	 >>I / Preset+
 Display	 Display / Media	 Stop	 Stop / Hold
 Text	 Text / Goto	 <<	 << / Tune-
 Time	 Sleep / Timer	 >>	 >> / Tune+
 Pitch Control-	 Left	 1	 1
 Reset	 OK	 2	 2
 Pitch Control+	 Right	 3	 3
 Input+	 CH+ / Page+	 4	 4
 Vol+	 Vol+	 5	 5





Original		Replacement		Original		Replacement	
	6		6				
	7		7				
	8		8				
	9		9				
	Menu		Menu / Home				
	0		0				
	Enter		Smart / List				

