


 

 










 


 

 

 

 







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 DR+/Pop-Up-M	 D.Menu / Top
 */Zoom	 Zoom / Size
 */Zoom	 Fav / Marker / PC
 Web	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 0/AV	 AV / Input / RDS

Original	Replacement
 EPG	 Guide / EPG / -/-
 Home	 Shift + Home / Menu /
 Home	 Smart / List
 PIP	 Picture / Format
 Text	 Text / Goto
 Menu	 Menu / Home
 Back	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 PR-	 CH- / Page-





	Original	Replacement	Original	Replacement
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue/Marker	 Blue / Prime Video / Random		
	Blue/Marker	 Shift + Fav / Marker / PC		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		

