



Original	Replacement	Original	Replacement
Power	Power	Mute	Mute / Dimmer
Tv/AV	AV / Input / RDS	Vol-	Vol-
1	1	Up	Up
2	2	CH+	CH+ / Page+
3	3	Vol+	Vol+
Eject	Eject / Surround	Left	Left
4	4	OK	OK
5	5	Right	Right
6	6	Sys Menu	D.Menu / Top
Play/Pause	Play / Slow	CH-	CH- / Page-
7	7	Down	Down
8	8	Display	Display / Media
9	9	Picture	Picture / Format
Stop	Stop / Hold	Sound	Sound / Title
0	0	Timer	Sleep / Timer
-/--	Shift + Guide / EPG / -/--	Nicam/A2	Audio / Lang I/II
Return	Back / Return	Lan/Prog-	Shift + CH- / Page-

Original	Replacement	Original	Replacement
Mute	Mute / Dimmer	Vol-	Vol-
Vol-	Vol-	Up	Up
Up	Up	CH+	CH+ / Page+
CH+	CH+ / Page+	Vol+	Vol+
Vol+	Vol+	Left	Left
Left	Left	OK	OK
OK	OK	Right	Right
Right	Right	Sys Menu	D.Menu / Top
Sys Menu	D.Menu / Top	CH-	CH- / Page-
CH-	CH- / Page-	Down	Down
Down	Down	Display	Display / Media
Display	Display / Media	Picture	Picture / Format
Picture	Picture / Format	Sound	Sound / Title
Sound	Sound / Title	Timer	Sleep / Timer
Timer	Sleep / Timer	Nicam/A2	Audio / Lang I/II
Nicam/A2	Audio / Lang I/II	Lan/Prog-	Shift + CH- / Page-
Lan/Prog-	Shift + CH- / Page-		



