
 
 

 
 





 






| Original | Replacement |
|--|--|
|  TV Power |  Power |
|  NET |  Display / Media |
|  [i+] |  Info / Angle |
|  P.Info |  Shift + Info / Angle |
|  ATV |  Shift + Setup / OPT / Tools |
|  DTV |  Setup / OPT / |
|  SAT |  Shift + 0 |
|  Radio |  TV/Radio / |
|  Power Source |  Shift + Power |
|  <<< |  <<< / Tune- |
|  Play |  Play / Slow |
|  >>> |  >>> / Tune+ |
|  Control |  Smart / List |
|  Rec |  Rec / Rec Mode |
|  Rec Stop |  Shift + Stop / |
|  Stop |  Stop / Hold |
|  Ready |  Eject / Surround |

| Original | Replacement |
|---|---|
|  ← |  I<<< / Preset- |
|  |  Pause / Step / Freeze |
|  → |  >>>I / Preset+ |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  S |  Fav / Marker / PC |
|  0 |  0 |
|  ↻ |  AV / Input / RDS |
|  I/II/I+II |  Audio / Lang I/II |
|  [<I>] |  Zoom / Size |



