



 
 


 
 
 


 

 
 
 







 

 

 

 



 



 



	Original	Replacement		Original	Replacement
	Power		Power		Dev.List
	Mute		Mute		EPG
	1		1		Subtitle
	2		2		Text
	3		3		Auto
	4		4		Menu
	5		5		Zoom
	6		6		Info
	7		7		Exit
	8		8		Up
	9		9		Down
	0		0		Right
	Lang		Dual		Left
	Time Shift		Smart		Ch +
	Tv/Radio		TV/R		Ch -
	FAV	 + 	Shift + Pre Ch		Vol +
	Recall		Pre Ch		Vol -





Original	Replacement	Original	Replacement
 Enter	 Ok		
 Filelist	 AV		
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 <<	 <<		
 >>	 >>		
 Red/FAV./Daily	 Red		
 Green/Del./Weekl	 Green		
 Yellow/Movie/P.Inf	 Yellow		
 Blue/Lock/Timer	 Blue		

