 








 



 






 










 



 









 

 

 

 

 



 

 

 









 

 

 

 







Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Red / ↑	 Red / Netflix / Search	 5	 5
 green / ↓	 Green / APP / Repeat	 6	 6
 Yellow	 Yellow / YouTube / Repeat	 7	 7
 Blue	 Blue / Prime Video / Random	 8	 8
 Exit	 Exit / Cancel / Clear	 9	 9
 [≡o]	 Sleep / Timer	 P<P/Swap	 Picture / Format
 [≡+]	 Stop / Hold	 0	 0
 [≡x]	 Smart / List	 -/--	 Shift + Guide / EPG / -/--
 [≡]	 Text / Goto	 Vol-	 Vol-
 [/≡]	 Setup / OPT /	 Vol+	 Vol+
 [≡♦]/[+]/Wide	 Menu / Home	 Mute	 Mute / Dimmer
 [≡?]	 Shift + Info / Angle	 P-	 CH- / Page-
 [≡i]/Guide	 Guide / EPG / -/--	 P+	 CH+ / Page+
 1	 1	 [i]/Info	 Info / Angle
 2	 2	 Tv/DTV	 TV/Radio /
 3	 3	 [AV]/Source	 AV / Input / RDS





	Original	Replacement		Original	Replacement
	I-II	 Audio / Lang I/II			
	PP	 Back / Return			
	Up	 Up			
	Left	 Left			
	OK	 OK			
	Right	 Right			
	M	 D.Menu / Top			
	Down	 Down			

