


 









 


Original	Replacement
 Source	 AV / Input / RDS
 Sync Menu	 D.Menu / Top
 Power	 Power
 Digital/Analog	 Display / Media
 Audio	 Audio / Lang I/II
 [+]	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]	 Text / Goto
 0	 0

Original	Replacement
 [...]	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Up	 Up
 [i+]/[?]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Vol+	 Vol+
 Recall	 Fav / Marker / PC





	Original	Replacement		Original	Replacement
	Prog+	 CH+ / Page+			
	Vol-	 Vol-			
	Mute	 Mute / Dimmer			
	Prog-	 CH- / Page-			
	<<	 << / Tune-			
	Play	 Play / Slow			
	>>	 >> / Tune+			
	I<<	 I<< / Preset-			
	Pause	 Pause / Step / Freeze			
	Stop	 Stop / Hold			
	>>I	 >>I / Preset+			

