 



 
 


 



 



 

 
 
 


 



 
 


 










 
 

 

 

 




 


 


 




 

 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Input		AV
	ATV		Shift + Smart
	DTV		Smart
	EPG		Guide
	Radio		TV/R
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	Menu		Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	End		Exit
	Back		Back





Original	Replacement
[≡O]	Media
[≡+]	Format
[≡]	Text
[≡?]	Options
[≡◆]	List
[...]	Subt
[i+]	Info
P.Info	Shift + Info
▼/O//I/II/I+II	Dual
AV Mode	Shift + AV
Demo	Shift + Media
[<>]	Sleep
Power Aquos Link	Shift + Power
<< Aquos Link	<<
>> Aquos Link	>>
Play Aquos Link	Play
Option Aquos Link	Shift + Pre Ch

Original	Replacement
Rec Aquos Link	Rec
Rec Stop Aquos	Pause
Stop Aquos Link	Stop

