



 







 













 



 
 
















 


 







 





 





 
 
 
 
 
 



 






Original		Replacement		Original		Replacement	
	Power		Power		P+		CH+ / Page+
	Tv/DTV		TV/Radio /		Vol-		Vol-
	Source		AV / Input / RDS		P-		CH- / Page-
	1		1		Guide		Guide / EPG / -/--
	2		2		Menu		Menu / Home
	3		3		W.Link		Display / Media
	4		4		Tools		Setup / OPT /
	5		5		Return		Back / Return
	6		6		Up		Up
	7		7		Left		Left
	8		8		Enter		OK
	9		9		Right		Right
	-/--	 + 	Shift + Guide / EPG / -/--		Info		Info / Angle
	0		0		Down		Down
	PRE-CH		Fav / Marker / PC		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Red		Red / Netflix / Search
	Mute		Mute / Dimmer		Green		Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Text / Goto		
	Zoom / Size		
	D.Menu / Top		
	Picture / Format		
	Smart / List		
	Subtitle / EQ		
	<< / Tune-		
	Pause / Step / Freeze		
	>> / Tune+		
	Rec / Rec Mode		
	Play / Slow		
	Stop / Hold		

Original	Replacement	Original	Replacement

