 



 


 
 
 
 

 
 



 



 
 


 
 
 
 

 
 
 
 
 
 
 

 



 
 
 

 
 




 
 
 

 

 

 

 





 

 

 

 
 
 
 

 

 
 
 
 

 













Original		Replacement		Original		Replacement	
	Power		Power		Xacti Menu		Blue
	Eco		Shift + 3D		1		1
	Audio		Dual		2		2
	On Timer		Text		3		3
	Caption		Subt		4		4
	Reset		3D		5		5
	Sleep		Sleep		6		6
	Picture		Format		7		7
	Sound		Shift + Dual		8		8
	Play		Play		9		9
	Pause		Pause		0		0
	Stop		Stop		--/Sub CH		Guide
	<<		<<		Input		AV
	>>		>>		Vol+		Vol +
	W		Red		Vol-		Vol -
	T		Green		Mute		Mute
	Camera		Yellow		CH+		Ch +





	Original	Replacement	Original	Replacement
	CH-	 Ch -		
	Recall	 Pre Ch		
	DYN Vol	 Smart		
	USB	 Media		
	Pix Shape	 Options		
	Menu	 Menu		
	Help	 D. Menu		
	Info	 Info		
	Exit	 Exit		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		
	Enter	 Ok		

