













 







 





 

 

 



 



 



 







 

























 

 

 









 

 















Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Zoom / Size		3		3
	USB/CR		Shift + 8		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	PMode		Picture / Format		7		7
	SMode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/--		Guide / EPG / -/--
	Left		Left		Back		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original	Replacement
	 Vol+
	 CH- / Page-
	 Fav / Marker / PC
	 TV/Radio /
	 Vol-
	 Text / Goto
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Subtitle / EQ
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Red / Netflix / Search
	 Green / APP / Repeat

Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

