




 





 











 





 











 





 





 



 

 

 











 

 



 

 


 


 

 

 

 

 








Original	Replacement
 Power	 Power
 Tv/AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Eject	 Eject
 Play/Pause	 Play
 Stop	 Stop
 Return	 Back

Original	Replacement
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Sys Menu	 Menu
 Display	 Shift + Info
 OK	 Ok
 Picture	 Format
 Sound	 Dual
 Timer	 Shift + AV
 Nicam/A2	 Media
 Lan/Prog-	 Shift + Ch -





Original	Replacement
 Zoom/Prog+	 Shift + Ch +
 Sub	 Subt
 Goto	 Options
 SET/Tv/TXT/DVB-	 Text
 ANG/Reveal/Exit	 Exit
 Menu/Cancel/Tv Format	 D. Menu
 Title/info	 Info
 <</Hold/Languag	 <<
 >>/Size/Text	 >>
 I<</Subpage	 I<<
 FAV	 Pre Ch
 >>I/Index	 >>I
 EPG	 Guide
 Red/Pro	 Red
 Tv/Radio	 TV/R
 Green/Slow/Audio	 Green
 Yellow/Rep/Freeze	 Yellow

Original	Replacement
 Blue/A-B/Subtitle	 Blue

