




 

 

 

 









 

 



 

 





 





 





 






 

 


 

 










Original	Replacement
 Power	 Power
 Tv/AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Eject	 Eject
 Play/Pause	 Play
 Stop	 Stop
 Return	 Back

Original	Replacement
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Sys Menu	 Menu
 Display	 Shift + Info
 OK	 Ok
 Picture	 Format
 Sound	 Dual
 Timer	 Shift + AV
 Nicam/A2	 Media
 Lan/Prog-	 Shift + Ch -





Original	Replacement		
PROG+ ZOOM	Zoom/Prog+	+	Shift + Ch +
SUB	Sub		Subt
GOTO	Goto		Options
TV/TXT DVB-MENU SET	SET/Tv/TXT/DVB-		Text
REVEAL EXIT ANG	ANG/Reveal/Exit		Exit
CANCEL TV FORMAT MENU	Menu/Cancel/Tv Format		D. Menu
INFO TITLE	Title/info		Info
HOLD LANGUAGE LANGUAGE	<</Hold/Languag		<<
SIZE TEXT	>>/Size/Text		>>
SUBPAGE FAV FAV	I<</Subpage		I<<
SUBPAGE FAV FAV	FAV		Pre Ch
INDEX EPG EPG	>>I/Index		>>I
INDEX EPG EPG	EPG		Guide
TV/RADIO PROG	Red/Pro		Red
TV/RADIO PROG	Tv/Radio		TV/R
AUDIO SLOW	Green/Slow/Audio		Green
FREEZE REP	Yellow/Rep/Freeze		Yellow

Original	Replacement		
SUBTITLE A-B	Blue/A-B/Subtitle		Blue

