



 

 
 


 

 













 

 

 





 






Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 RETURN BACK Back
 SOURCE	 TIMER AV AV
 P.STD	 HOME SMART Smart

Original	Replacement
 S.STD	 APP MEDIA Media
 MENU/ATV	 TOP MENU MENU Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK Ok
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 PR-	 CH - Ch -
 PR+	 + CH Ch +
 FREEZE	 II Pause
 DISPLAY INFO	 DISPLAY INFO Info
 DVB MENU	 E-MANUAL D.MENU D. Menu
 TTX [.] / TTX	 REPEAT TEXT Text
 I/II	 SOUND DUAL Dual
 EXIT [≡x] / Exit	 CLEAR EXIT Exit





	Original	Replacement		Original	Replacement
	[≡♦]/EPG	 Guide			
	[≡+]/FAV	 Pre Ch			
	[≡i]/TV.R	 TV/R			
	[≡?]/Subt	 Subt			
	[≡o]/Aspect	 Format			
	[≡..]	 List			
	Red	 Red			
	Green	 Green			
	Yellow	 Yellow			
	Blue	 Blue			

