



| Original | Replacement |
|------------------|--------------------------|
| Power | Power |
| Power Tv | Shift + Power |
| Eject/Open-Close | Eject / Surround |
| AV Tv | Shift + AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| PR/TRK+ | Shift + CH+ / |
| PR+ Tv | CH+ / Page+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| PR/TRK- | Shift + CH- / |
| PR- Tv | CH- / Page- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |

| Original | Replacement |
|----------------|-----------------------|
| Vol+ Tv | Vol+ |
| Tv/VCR | TV/Radio / |
| 0 | 0 |
| AV | AV / Input / RDS |
| Vol- Tv | Vol- |
| <</Backward | << / Tune- |
| >>/Forward | >> / Tune+ |
| I<< Skip | I<< / Preset- |
| Skip >>I | >>I / Preset+ |
| Pause/Step | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| Display/CLK/CN | Display / Media |
| Up | Up |
| i/Setup | Info / Angle |
| Left | Left |
| OK/Enter | OK |





| Original | Replacement |
|------------------|--------------------------|
| Power | Power |
| Power Tv | Shift + Power |
| Eject/Open-Close | Eject / Surround |
| AV Tv | Shift + AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| PR/TRK+ | Shift + CH+ / |
| PR+ Tv | CH+ / Page+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| PR/TRK- | Shift + CH- / |
| PR- Tv | CH- / Page- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |

| Original | Replacement |
|----------------|-----------------------|
| Vol+ Tv | Vol+ |
| Tv7VCR | TV/Radio / |
| 0 | 0 |
| AV | AV / Input / RDS |
| Vol- Tv | Vol- |
| <</Backward | << / Tune- |
| >>/Forward | >> / Tune+ |
| I<< Skip | I<< / Preset- |
| Skip >>I | >>I / Preset+ |
| Pause/Step | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| Display/CLK/CN | Display / Media |
| Up | Up |
| i/Setup | Info / Angle |
| Left | Left |
| K/Enter | OK |



