





Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 Eject/Open-Close	 Eject / Surround
 AV Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/TRK+	 Shift + CH+ /
 PR+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/TRK-	 Shift + CH- /
 PR- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9

Original	Replacement
 Vol+ Tv	 Vol+
 Tv/VCR	 TV/Radio /
 0	 0
 AV	 AV / Input / RDS
 Vol- Tv	 Vol-
 <</Backward	 << / Tune-
 >>/Forward	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Display/CLK/CN	 Display / Media
 Up	 Up
 i/Setup	 Info / Angle
 Left	 Left
 OK/Enter	 OK





Original	Replacement
 Right	 Right
 Disc Menu	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 O)/Audio	 Audio / Lang I/II
 [...] / Subtitle	 Subtitle / EQ
 Camera/Angle	 Shift + Info / Angle
 Zoom	 Zoom / Size
 Rec/ITR	 Rec / Rec Mode
 Lock	 Shift + Exit / Cancel / Clear
 Title	 Sound / Title
 Program	 Shift + TV/Radio / Program
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 A-B/LP	 Yellow / YouTube / Repeat

Original	Replacement
 Random/CM	 Smart / List



 




Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 Eject/Open-Close	 Eject / Surround
 AV Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/TRK+	 Shift + CH+ /
 PR+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/TRK-	 Shift + CH- /
 PR- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9

Original	Replacement
 Vol+ Tv	 Vol+
 Tv7VCR	 TV/Radio /
 0	 0
 AV	 AV / Input / RDS
 Vol- Tv	 Vol-
 <</Backward	 << / Tune-
 >>/Forward	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Display/CLK/CN	 Display / Media
 Up	 Up
 i/Setup	 Info / Angle
 Left	 Left
 K/Enter	 OK





Original	Replacement
	 Right
	 D.Menu / Top
	 Down
	 Back / Return
	 Audio / Lang I/II
	 Subtitle / EQ
	 Shift + Info / Angle
	 Zoom / Size
	 Rec / Rec Mode
	 Shift + Exit / Cancel / Clear
	 Sound / Title
	 Shift + TV/Radio / Program
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Exit / Cancel / Clear
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Replacement
	 Smart / List

