



Original	Replacement
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
	Back / Return
Vol+	Vol+
I/II/Audio	Audio / Lang I/II
Auto	Smart / List

Original	Replacement
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
	Up
	Left
OK/Enter	OK
	Right
Menu	Menu / Home
	Down
Exit	Exit / Cancel / Clear
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Size	Zoom / Size
Play/Pause / Size	Play / Slow





	Original	Replacement	Original	Replacement
	Play/Pause / Size	 Pause / Step / Freeze		
	Stop/Hold	 Stop / Hold		
	Text	 Text / Goto		
	Subtitle	 Subtitle / EQ		
	<</Index	 << / Tune-		
	>>/Reveal	 >> / Tune+		
	<</Subpage	  << / Preset-		
	>> /FAV	 >>  / Preset+		
	>> /FAV	 Fav / Marker / PC		
	Media	 Shift + Display / Media		
	Rec	 Rec / Rec Mode		
	EPG	 Guide / EPG / ---		
	Tv/Radio	 TV/Radio /		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

