 





 

 
 











 

 
 
 

 





 

 






 











 


 
 
 


Original		Replacement		Original		Replacement	
	Power		Power		Vol+		Vol +
	Sleep		Sleep		Vol-		Vol -
	CBL/SAT		1		Eco		3D
	DVD		2		Info		Info
	Blu-ray		3		Option		Options
	Game		4		Back		Back
	AUX		5		Setup		Menu
	Media Player		6		Enter		Ok
	USB		7		Up		Up
	TV Audio		8		Down		Down
	Tuner		9		Right		Right
	Bluetooth		Guide		Left		Left
	Internet Radio		0		Play		Play
	Mute		Pre Ch		Pause		Pause
	CH/Page+		Mute		I<</Tune-		I<<
	CH/Page-		Ch +		>>I/Tune+		>>I
			Ch -		Green/Movie		Green





Original	Replacement
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX	 5
 Media Player	 6
 USB	 7
 TV Audio	 8
 Tuner	 9
 Bluetooth	 0
 Internet Radio	 Pre Ch
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 Mute	 Mute
 Back	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Play	 Play
 Pause	 Pause
 I<</Tune-	 I<<
 >>I/Tune+	 >>I
 Quick Select 1	 D. Menu
 Quick Select 4	 AV
 Quick Select 3	 Eject
 Quick Select 2	 Text

