



















 

 

 





 




| Original | Replacement |
|---|--|
|  Power |  Power |
|  SD/HC |  Shift + Display / Media |
|  Input TV |  Shift + AV / Input / RDS |
|  Input AV |  AV / Input / RDS |
|  Aspect |  Picture / Format |
|  Menu |  Menu / Home |
|  N |  Shift + Up |
|  Direct Tv Rec |  D.Menu / Top |
|  i |  Info / Angle |
|  Exit |  Exit / Cancel / Clear |
|  Viera Tools |  Smart / List |
|  Viera Link |  Display / Media |
|  Up |  Up |
|  Guide |  Guide / EPG / -/-- |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |

| Original | Replacement |
|--|---|
|  Option |  Setup / OPT / |
|  Down |  Down |
|  Return |  Back / Return |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Text |  Text / Goto |
|  [≡♦]/Sttl |  Subtitle / EQ |
|  [≡i]/Index |  Shift + Info / Angle |
|  [≡+]/Hold |  Shift + Stop / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |





| Original | Replacement | Original | Replacement |
|--------------|----------------------|------------|-----------------------|
| 7 | 7 | Pause/Step | Pause / Step / Freeze |
| 8 | 8 | Rec | Rec / Rec Mode |
| 9 | 9 | | |
| Mute | Mute / Dimmer | | |
| 0 | 0 | | |
| OIO | Shift + Smart / List | | |
| Vol+ | Vol+ | | |
| CH+ | CH+ / Page+ | | |
| Vol- | Vol- | | |
| CH- | CH- / Page- | | |
| Power Down | Shift + Power | | |
| Programme | Shift + CH- / | | |
| Programme Up | Shift + CH+ / | | |
| <</l<< | << / Tune- | | |
| Play | Play / Slow | | |
| >>/>>l | >> / Tune+ | | |
| Stop | Stop / Hold | | |

| Original | Replacement | Original | Replacement |
|------------|-----------------------|----------|-------------|
| Pause/Step | Pause / Step / Freeze | | |
| Rec | Rec / Rec Mode | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

