 

 

 

 
 




 










 
 
 


 



 



 









 
 
 
 






















Original		Replacement		Original		Replacement	
	Power		Power		Zoom		Zoom / Size
	DVD/CD		Shift + 2		Playlist2		Green / APP / Repeat
	Tuner(FM/AM)		Shift + 6		7		7
	Sound Retreiver		Shift + Sound / Title		8		8
	USB		Shift + 8		9		9
	Line		TV/Radio /		Playlist3		Yellow / YouTube / Repeat
	Open/Close		Eject / Surround		Clear		Exit / Cancel / Clear
	1		1		0		0
	2		2		Display		Display / Media
	Audio		Audio / Lang I/II		Top Menu		D.Menu / Top
	3		3		Setup		Setup / OPT /
	Subtitle		Subtitle / EQ		Up/Tune+		Up
	Playlist1		Red / Netflix / Search		Menu		Menu / Home
	4		4		SR+		Picture / Format
	5		5		Left/ST-		Left
	Angle		Info / Angle		Enter		OK
	6		6		Right/ST+		Right





Original	Replacement	Original	Replacement
	 Smart / List		 CH+ / Page+
	 +  Shift + Menu /		 +  Shift + Vol+
	 Down		 Sleep / Timer
	 Back / Return		 AV / Input / RDS
	 Guide / EPG / -/--		 CH- / Page-
	 Fav / Marker / PC		 +  Shift + Vol-
	 +  Shift + Eject / Surround		 Mute / Dimmer
	 Text / Goto		 Vol-
	 Sound / Title		 Vol+
	 << / Tune-		
	 Play / Slow		
	 >> / Tune+		
	 I<< / Preset-		
	 Pause / Step / Freeze		
	 Stop / Hold		
	 >>I / Preset+		
	 +  Shift + Power		

