


 


 

 


 
 



 

















 

 
 

 

 







 

 



 
 
 

 



 










 

 







 


Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Radio/Tv		TV/R
	Last View		Pre Ch
	CH/Page+		Ch +
	CH/Page-		Ch -
	Internet		Smart
	Guide		Guide
	i/Status		Info
	X/Exit		Exit
	Option		Options
	Return		Back
	Play/x1.3		Play
	Pause/Pause Live		Pause
	Stop		Stop
	>>		>>
	<<		<<
	<</Remind Live		<<
	>>		>>
	Rec		Rec
	Function Menu		Menu
	Direct Navigator/PopUp		List
	OK		Ok
	Up		Up
	Down		Down





Original	Replacement
 Right/ >	 Right
 Left/<	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [=]/Text	 Text
 [=◆]/STTL	 Subt
 Rec Mode	 Shift + Rec
 Prog/Check	 Sleep
 Chapter	 Eject
 Audio	 Dual
 Time Slip	 D. Menu
 Input Select	 AV
 DEL	 Mute
 Manual Skip -10s	 Format
 Manual Skip +60s	 3D

Original	Replacement
 Power Tv	 Shift + Power
 Vol+ TV	 Vol +
 AV/Input TV	 Shift + AV
 Vol- TV	 Vol -
 CH+ TV	 Shift + Ch +
 CH- TV	 Shift + Ch -
 Drive Select	 Media

