
















 
 
 





 


 
 
 

 


 




 

 

 


 

 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Info		Info
	Menu		Menu
	Exit		Exit
	P-		Ch -
	P+		Ch +
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Tv/Radio		TV/R
	Guide		Guide
	Freeze		Pause
	FAV		Shift + Pre Ch
	Tv/AV		AV
	Red		Red
	Audio		Dual
	Green		Green
	Subt.		Subt
	Yellow		Yellow
	Text		Text



