



Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Open / Close		Eject		9		9
	TV / DTV		TV/R		-/--		Shift + Guide
	Line		AV		0		0
	DVD		Media		PRE		Pre Ch
	TTX		Text		Vol +		Vol +
	PIP ON / OFF		Shift + Power		Vol -		Vol -
	PIP Swap		Shift + Back		Prog +		Ch +
	PIP Source		Shift + AV		Prog -		Ch -
	PIP Sound		Shift + Dual		M/S		Subt
	1		1		Still		Shift + Pause
	2		2		Sleep		Sleep
	3		3		TV Menu		Menu
	4		4		P.STD		Format
	5		5		S.STD		Shift + Subt
	6		6		P.Size		Shift + Format
	7		7		Exit / Cancel		Exit





Original	Replacement	Original	Replacement
	Up		Blue
	Right		Blue
	Down		SHIFT + REPEAT Text
	Left		SHIFT + SEARCH TV/R
	Enter		Dual
	Mute		3D
	Display		Back
	Stop		SHIFT + TOP MENU Menu
	Play		List
	Pause		Options
	<<		Guide
	>>		SHIFT + CLEAR Exit
	I<<		Info
	>>I		
	Red / Setup		
	Green / Title		
	Yellow / Menu		

