



Original	Replacement	Original	Replacement
	Power		Set up / OPT /
	Source		OK
	1		Up
	2		Down
	3		CH+ / Page+
	4		Right / Zoom+
	5		Left / Zoom-
	6		CH- / Page-
	7		Info / Angle
	8		Mute / Dimmer
	9		Vol +
	0		Vol -
	Guide / EPG / - / -		Text / Goto
	Back / Return		Subtitle / EQ
	D. Menu / Top		Smart / List
	Menu / Home		Red / Netflix / Search
	Exit / Cancel / Clear		Display / Media



