





















 













| Original | Replacement |
|---|---|
|  Power |  Power |
|  Sleep |  Sleep / Timer |
|  Top Menu |  D.Menu / Top |
|  Subtitle |  Shift + Subtitle / EQ |
|  Display |  Display / Media |
|  Setup |  Setup / OPT / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Disc |  Smart / List |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  >10/-/- |  Guide / EPG / -/- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |

| Original | Replacement |
|--|--|
|  0 |  0 |
|  Pro Logic |  Sound / Title |
|  CH Select |  TV/Radio / |
|  Test |  Text / Goto |
|  Super SRND |  Eject / Surround |
|  Menu |  Menu / Home |
|  EQ |  Subtitle / EQ |
|  Up |  Up |
|  Shift Up |  Shift + Up |
|  Return |  Back / Return |
|  Super Sound EQ |  CH+ / Page+ |
|  Left |  Left |
|  Shift Left |  Shift + Left |
|  Enter |  OK |
|  Right |  Right |
|  Shift Right |  Shift + Right |
|  S.3D AI EQ |  Zoom / Size |





| Original | Replacement |
|---|--|
|  |  Fav / Marker / PC |
|  |  Down |
|  |  +  Shift + Down |
|  |  Info / Angle |
|  |  AV / Input / RDS |
|  |  Red / Netflix / Search |
|  |  +  Shift + 7 |
|  |  +  Shift + 4 |
|  |  +  Shift + 5 |
|  |  Green / APP / Repeat |
|  |  +  Shift + 2 |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  +  Shift + 6 |
|  |  +  Shift + Play / |
|  |  Exit / Cancel / Clear |
|  |  Pause / Step / Freeze |

| Original | Replacement |
|---|---|
|  |  Stop / Hold |
|  |  Play / Slow |
|  |  Audio / Lang I/II |
|  |  Picture / Format |
|  |  CH- / Page- |
|  |  << / Tune- |
|  |  >> / Tune+ |
|  |  Mute / Dimmer |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|  |  Vol- |
|  |  Vol+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

