



Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<<
 Tv Input	 +  Shift + AV	 <<	 <<
 Input	 AV	 >>	 >>
 Ratio	 Smart	 >>I	 >>I
 - *	 +  Shift + Left	 Exit	 Exit
 * +	 +  Shift + Right	 List	 List
 Simplink	 Media	 Menu	 Menu
 Sleep	 Sleep	 Q.View	 Options
 Text	 Text	 Up	 Up
 I/II	 Dual	 Down	 Down
 Red	 Red	 Right	 Right
 Green	 Green	 Left	 Left
 Yellow	 Yellow	 OK	 Ok
 Blue	 Blue	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 Play	 Play	 FAV	 Pre Ch
 Pause	 Pause	 Mute	 Mute



 
 

 
 
 
 
 

 

 










 

 
 



 
 
 
 



Original	Replacement
PR+	Ch +
PR-	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
[≡o]/Time	Guide
[≡+]/Hold	Subt
[≡◆]/Size	Format
[≡x]/Update	TV/R
[≡i]/Index	Info

Original	Replacement
[≡?]/Reveal	3D





	Original	Replacement		Original	Replacement
	Power		Power		4
	Stop		Stop		5
	Play		Play		6
	Pause		Pause		7
	<<		<<		8
	1<<		1<<		9
	>>		>>		0
	>>1		>>1		Vol+
	Menu		Menu		Vol-
	Up		Up		Mute
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	1		1		
	2		2		
	3		3		





Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Input Source	 AV	 9	 9
 Stop	 Stop	 0	 0
 Play	 Play	 Vol+	 Vol +
 Pause	 Pause	 Vol-	 Vol -
 Rec	 Rec	 Mute	 Mute
 <<	 <<		
 >>	 >>		
 PR+	 Ch +		
 PR-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		

