


 






 
 
 



 
 
 
 

 
 




 




 

 







 
 
 
 

 




	Original	Replacement		Original	Replacement
	Power		Power		Info/[≡i]
	Mute		Mute		Vol+
	1		1		Vol-
	2		2		CH+
	3		3		CH-
	4		4		Menu
	5		5		Exit
	6		6		Recall
	7		7		Home
	8		8		≡
	9		9		Internet
	0		0		Up
	Back		Back		Down
	Audio		Dual		Right
	Source		AV		Left
	List		List		OK
	EPG		Guide		Radio/Audio+
					Info
					Vol +
					Vol -
					Ch +
					Ch -
					Menu
					Exit
					Pre Ch
					Shift + Smart
					Shift + Media
					Media
					Up
					Down
					Right
					Left
					Ok
					TV/R



