




 

 

 
 
 

 
 
 
 

 

 




 
 



 



 
 



 


 
 
 
 
 
 
 


 


 
 
 
 

 
 











Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>
 Open/Close	 Eject	 1	 1
 DVD	 Smart	 2	 2
 Display	 Info	 3	 3
 Disc Menu	 D. Menu	 4	 4
 Setup	 Options	 5	 5
 Return	 Back	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right	 Right	 9	 9
 Left	 Left	 0	 0
 Enter	 Ok	 Program	 Sleep
 Title	 List	 Clear	 Exit
 Pause / Step	 Pause	 O)) / Audio	 Dual
 Stop	 Stop	 [...] / Subtitle	 Subt
 Play	 Play	 Marker	 3D
 I<<	 I<<	 Search	 TV/R









Original	Replacement	Original	Replacement
Power	Power	>>I	>>I
Eject	Eject	1	1
Tv / VCR	TV/R	2	2
VCR	Smart	3	3
AV	AV	4	4
CLK / CNT	Info	5	5
[ i ]	Media	6	6
Up	Up	7	7
Down	Down	8	8
Right	Right	9	9
Left	Left	0	0
OK	Ok	Clear	Exit
Pause / Step	Pause	O)) / Audio	Dual
Stop	Stop	Search	Shift + TV/R
Rec / ITR	Rec	C.Lock	Back
Play	Play	0Z Repeat	Text
I<<	I<<	CM Skip	Yellow



