






 




















| Original | Replacement | Original | Replacement |
|----------|----------------|----------|----------------------|
| | Power | | Power |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | AV/CL | | AV / Input / RDS |
| | Zoom | | Zoom / Size |
| | [...]/Subtitle | | Subtitle / EQ |
| | Audio/Language | | Audio / Lang I/II |
| | ◀/Camera | | Shift + Info / Angle |
| | ? | | Setup / OPT / |
| | ECO | | Display / Media |
| | CEC | | Smart / List |
| | Mute | | Mute / Dimmer |
| | i | | Info / Angle |
| | Z/Back | | Back / Return |
| | PR+ | | CH+ / Page+ |
| | Up | | Up |
| | Vol- | | Vol- |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Vol+ | | Vol+ |
| | Down | | Down |
| | PR- | | CH- / Page- |
| | TVG/Top Menu | | Guide / EPG / -/-- |
| | TVG/Top Menu | | D.Menu / Top |
| | TXT/Menu | | Text / Goto |





| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  TXT/Menu |  Menu / Home | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
|  [<>] |  Shift + Zoom / | | |
|  Rec/ > |  Rec / Rec Mode | | |
|  Play |  Play / Slow | | |
|  Pause |  Pause / Step / Freeze | | |
|  Stop |  Stop / Hold | | |
|  < |  << / Preset- | | |
|  > |  >> / Preset+ | | |
|  << |  << / Tune- | | |
|  >> |  >> / Tune+ | | |
| | | | |
| | | | |
| | | | |




 




 

 





 















| Original | Replacement | Original | Replacement |
|----------|----------------|----------|----------------------|
| | Power | | Power |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | AV/CL | | AV / Input / RDS |
| | Zoom | | Zoom / Size |
| | [...]/Subtitle | | Subtitle / EQ |
| | Audio/Language | | Audio / Lang I/II |
| | ◀/Camera | | Shift + Info / Angle |
| | ? | | Setup / OPT / |
| | ECO | | Display / Media |
| | CEC | | Smart / List |
| | Mute | | Mute / Dimmer |
| | i | | Info / Angle |
| | Z/Back | | Back / Return |
| | PR+ | | CH+ / Page+ |
| | Up | | Up |
| | Vol- | | Vol- |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Vol+ | | Vol+ |
| | Down | | Down |
| | PR- | | CH- / Page- |
| | TVG/Top Menu | | Guide / EPG / -/-- |
| | TVG/Top Menu | | D.Menu / Top |
| | TXT/Menu | | Menu / Home |





| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  TXT/Menu |  Text / Goto | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
|  [<>] |  Shift + Zoom / | | |
|  Rec/ > |  Rec / Rec Mode | | |
|  Play |  Play / Slow | | |
|  Pause |  Pause / Step / Freeze | | |
|  Stop |  Stop / Hold | | |
|  < |  << / Preset- | | |
|  > |  >> / Preset+ | | |
|  << |  << / Tune- | | |
|  >> |  >> / Tune+ | | |
| | | | |
| | | | |
| | | | |




 



 




 













| Original | Replacement | Original | Replacement |
|----------|----------------|----------|----------------------|
| | Power | | ECO |
| | 1 | | TV / 1 |
| | 2 | | DVD / 2 |
| | 3 | | CD - STB / 3 |
| | 4 | | VIDEO / 4 |
| | 5 | | TAPE / 5 |
| | 6 | | TUNER / 6 |
| | 7 | | AUX - HDD / 7 |
| | 8 | | USB / 8 |
| | 9 | | BLUETOOTH / 9 |
| | 0 | | HDMI - SAT / 0 |
| | AV/CL | | AV / Input / RDS |
| | Zoom | | Zoom / Size |
| | [...]/Subtitle | | Subtitle / EQ |
| | Audio/Language | | Audio / Lang I/II |
| | ◀/Camera | | Shift + Info / Angle |
| | ? | | Setup / OPT / |
| | ECO | | Display / Media |
| | CEC | | Smart / List |
| | Mute | | Mute / Dimmer |
| | i | | Info / Angle |
| | Z/Back | | Back / Return |
| | PR+ | | CH+ / Page+ |
| | Up | | Up |
| | Vol- | | Vol- |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Vol+ | | Vol+ |
| | Down | | Down |
| | PR- | | CH- / Page- |
| | TVG/Top Menu | | Guide / EPG / -/-- |
| | TVG/Top Menu | | D.Menu / Top |
| | TXT/Menu | | Text / Goto |

 















 























 

 

 





 





 

 











| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  TXT/Menu |  Menu / Home | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
|  [<>] |  Shift + Zoom / | | |
|  Rec/ > |  Rec / Rec Mode | | |
|  Play |  Play / Slow | | |
|  Pause |  Pause / Step / Freeze | | |
|  Stop |  Stop / Hold | | |
|  < |  << / Preset- | | |
|  > |  >> / Preset+ | | |
|  << |  << / Tune- | | |
|  >> |  >> / Tune+ | | |
| | | | |
| | | | |
| | | | |




 

 
 
 
 




















| Original | Replacement | Original | Replacement |
|---|----------------|---|----------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | AV/CL |  | AV / Input / RDS |
|  | Zoom |  | Zoom / Size |
|  | [...]/Subtitle |  | Subtitle / EQ |
|  | Audio/Language |  | Audio / Lang I/II |
|  | ◀/Camera |  | Shift + Info / Angle |
|  | ? |  | Setup / OPT / |
|  | ECO |  | Display / Media |
|  | CEC |  | Smart / List |
|  | Mute |  | Mute / Dimmer |
|  | i |  | Info / Angle |
|  | Z/Back |  | Back / Return |
|  | PR+ |  | CH+ / Page+ |
|  | Up |  | Up |
|  | Vol- |  | Vol- |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |
|  | Down |  | Down |
|  | PR- |  | CH- / Page- |
|  | TVG/Top Menu |  | Guide / EPG / -/-- |
|  | TVG/Top Menu |  | D.Menu / Top |
|  | TXT/Menu |  | Text / Goto |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  TXT/Menu |  Menu / Home | | |
|  Red / Netflix / Search |  | | |
|  Green / APP / Repeat |  | | |
|  Yellow / YouTube / Repeat |  | | |
|  Blue / Prime Video / Random |  | | |
|  [<>] |  Shift + Zoom / | | |
|  Rec/ > |  Rec / Rec Mode | | |
|  Play / Slow |  | | |
|  Pause / Step / Freeze |  | | |
|  Stop / Hold |  | | |
|  < |  << / Preset- | | |
|  > |  >> / Preset+ | | |
|  << |  << / Tune- | | |
|  >> |  >> / Tune+ | | |
| | | | |
| | | | |
| | | | |

