

 

 

 

 

 
 


 

 




 





 

 

 

 

 
 

 
 



 












 



Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Eco	 Eject / Surround
 0	 0
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up

Original	Replacement
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Option	 Setup / OPT /
 Return	 Back / Return
 Vol+	 Vol+
 Info	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 List	 Smart / List
 Tv	 TV/Radio /
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue/Lang	 Blue / Prime Video / Random		

