








 


 



 







 





 






 





 





 

 

 

 



 



 

 

 




	Original	Replacement		Original	Replacement
	 Power	 Power		 Exit	 Exit
	 Mute	 Mute		 Up	 Up
	 1	 1		 Down	 Down
	 2	 2		 Right	 Right
	 3	 3		 Left	 Left
	 4	 4		 Ok	 Ok
	 5	 5		 Vol+	 Vol +
	 6	 6		 Vol-	 Vol -
	 7	 7		 Sound	 Shift + Dual
	 8	 8		 Pic	 Shift + Format
	 9	 9		 Ch+	 Ch +
	 0	 0		 Ch-	 Ch -
	 Audio	 Dual		 Sleep	 Sleep
	 Recall	 Back		 Aspect	 Format
	 Tv Menu	 Menu		 Freeze	 Eject
	 Source	 AV		 Tv/Radio	 TV/R
	 ChList	 List		 Text	 Text





	Original	Replacement		Original	Replacement
	 Epg	 Guide		 I<<	 I<<
	 Fav	 Pre Ch		 >>I	 >>I
	 Info	 Info		 Play	 Play
	 Red	 Red		 Pause	 Pause
	 Green	 Green		 Stop	 Stop
	 Yellow	 Yellow		 Rec/Rep	 Rec
	 Blue	 Blue			
	 Reveal	 Media			
	 Hold	 D. Menu			
	 Index	 Shift + Info			
	 Subpage	 Shift + AV			
	 List	 Smart			
	 Mix	 Options			
	 Subtitle	 Subt			
	 Size	 3D			
	 <<	 <<			
	 >>	 >>			

